

# ExpressVote Users's Quick Guide

The ExpressVote is a voting system that combines paper-based voting with touch screen technology. The ExpressVote serves voters with special needs, by allowing a voter to vote using the touch-screen, the headphones and keypad, the rocker paddle, and/or the sip-n-puff device.



## ExpressVote Components



**Rocker Paddle**



**Audio Headphones**




**Keypad**

★ The ExpressVote is compatible with voter's personal Sip-n-Puff Devices

# ExpressVote Users's Quick Guide

Voters can use the keypad to maneuver through the ballot and make choices. (The keypad is used by the visually impaired and headphones should be used to hear ballot instructions.)

- Use the round **Repeat** button to have the **last spoken phrase repeated**.
- Use the **Tempo** button to **adjust the speed at which the synthesized voice reads** the text. Each time "Tempo" is pressed, the current phrase will be re-started at the newly selected speed.
- Use the **Volume** button to **adjust the synthesized speech** to the voters comfort level.
- Use the diamond shaped **Screen** button to **toggle the monitor screen on and off**. (The screen would typically be turned off for privacy while voting the audio ballot.)
- Press the **Down** arrow button to **scroll through the choices within a contest**.
- Use the **Select** button to **select a choice** once it has been read.

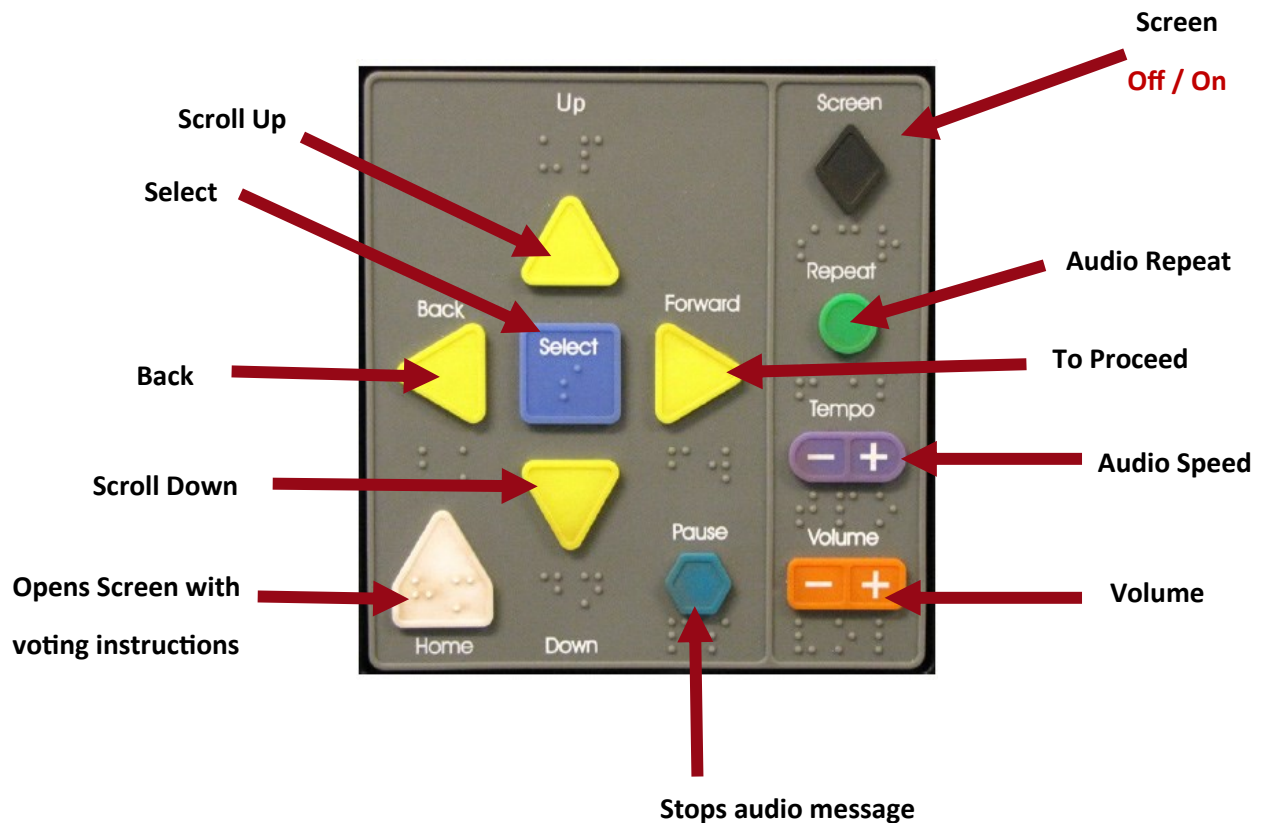

**Note: Voter Assistant Inspectors will be available at every polling location.**